


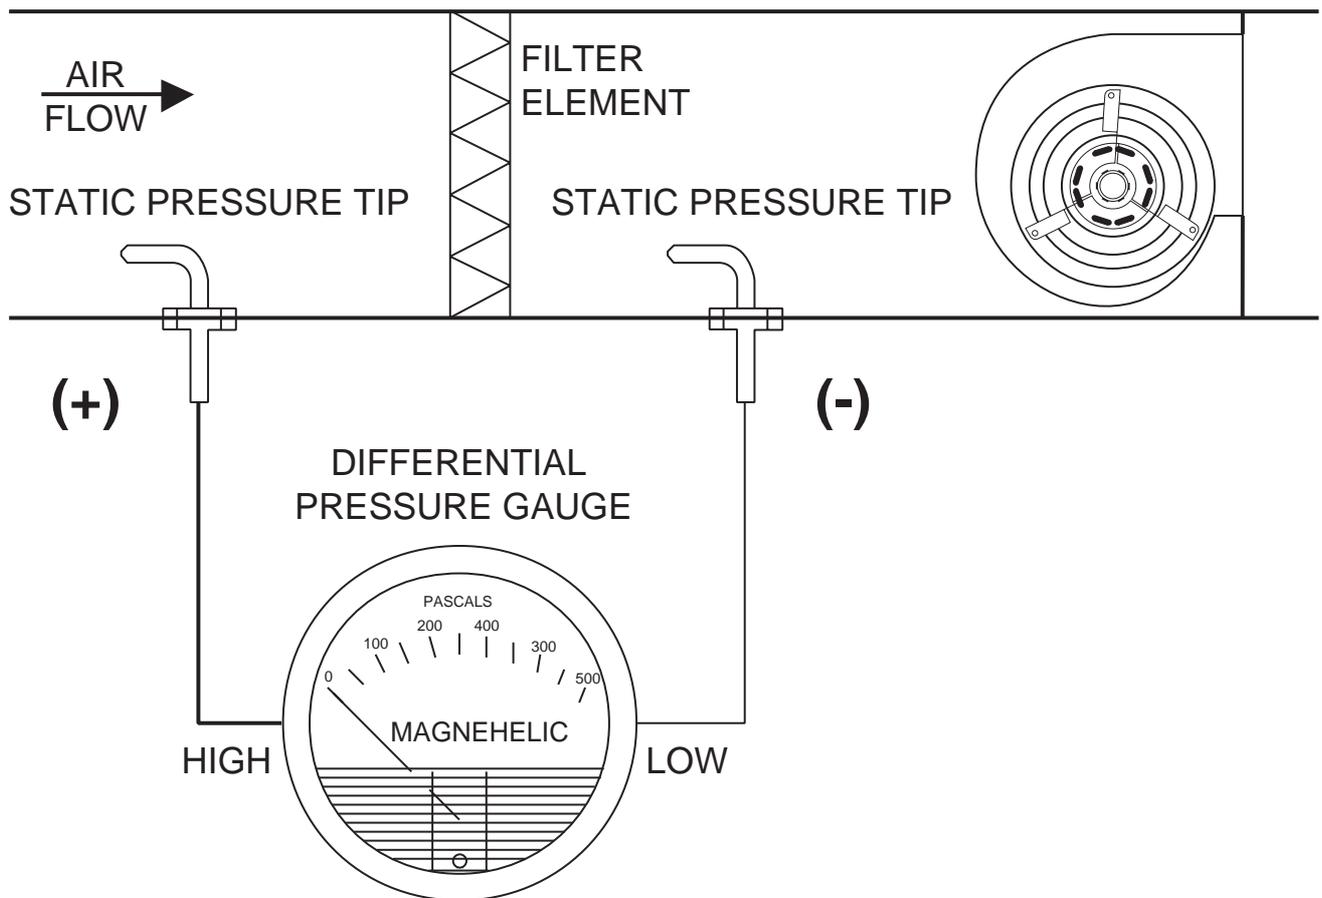

MEASUREMENT PRESSURE DROP

HOW AND WHEN TO CHANGE FILTERS -



OPERATION

- I Record clean pressure drop ____Pa. on the service label, (see page 2).
- II Good "Rule of Thumb" is to change at 2 to 2.5 times the initial clean pressure drop. For example; Filter clean at 50Pa - Change at 100 to 125Pa
- III Do not exceed maximum allowable pressure drop for the type of filter - see technical data for the particular filter involved.



Australian Air Filters
Phone: (02) 9997 4366 Fax: (02) 9997 2654
Internet: www.austair.com.au



Australian Air Filters has a policy of continuous product research and development and reserves the right to change design and specifications without notice.

© Copyright Australian Air Filters 2007